





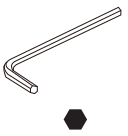
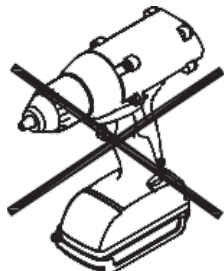
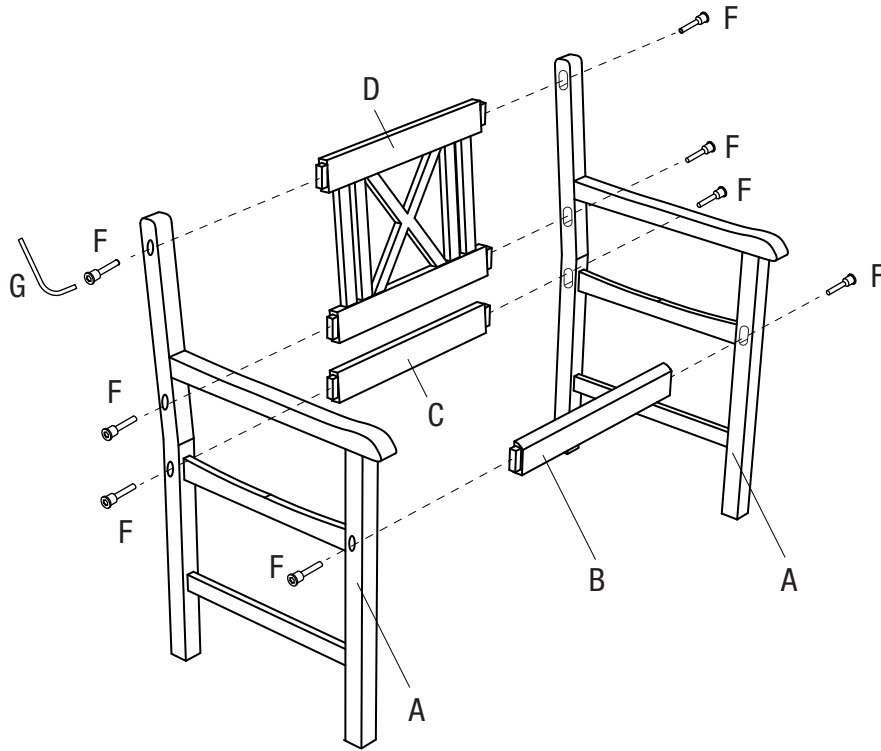


Assembly Instructions


ROSENBORG CHAIR

													
Leg	Front Apron	Back Apron	Backrest	Seat	Bolt - M6*40	Allen Key							
A	2 pcs	B	1 pc	C	1 pc	D	1 pc	E	1 pc	F	8 pcs	G	1 pc

1



2

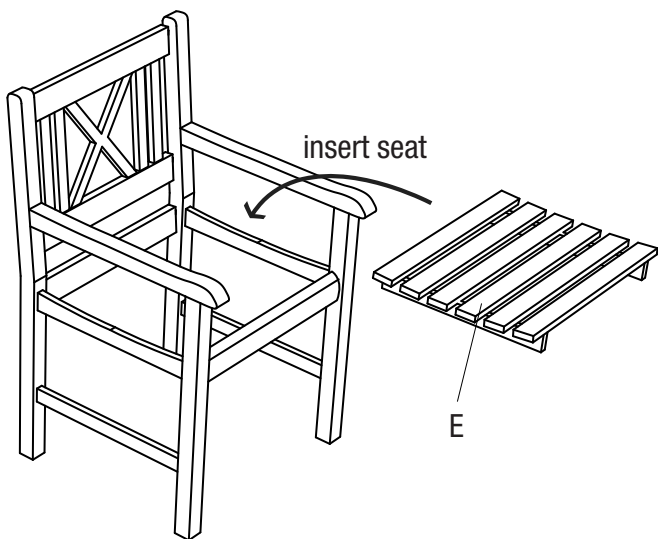

3

